




创意源于追求
Own Idea Of Lighting

NH1-X

USER MANUAL



NH1-X
SS9465

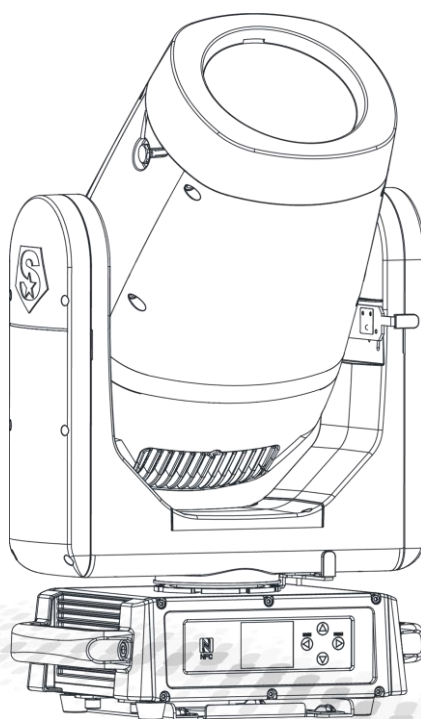

MODEL:SS9465SCM



— Since 1985 —

广州市雅江光电设备有限公司

Guangzhou Yajiang Photoelectric Equipment Ltd.

电话/ Tel : 020 -86947788

邮箱/E-mail : sales@yajiang.cn


传真/Fax : 020 -86943773

网址/Website : www.yajiang.cn

1 PRODUCT

1.1 TECHNICAL SPECIFICATIONS

Type	SS9465SCM
LED colors	1 LED(CW) 300W
Angle	3° - 52°
Power	550W
Control Protocol	DMX512, RDM, NFC, W-DMX(Optional)
Voltage Range	100-240V~,50/60Hz
Input Current	110V/5A,220V/2.5A
Protection	IP66
Operation Temperature	-20℃~45℃
Dimensions	360*219*601mm
Weight	22kg

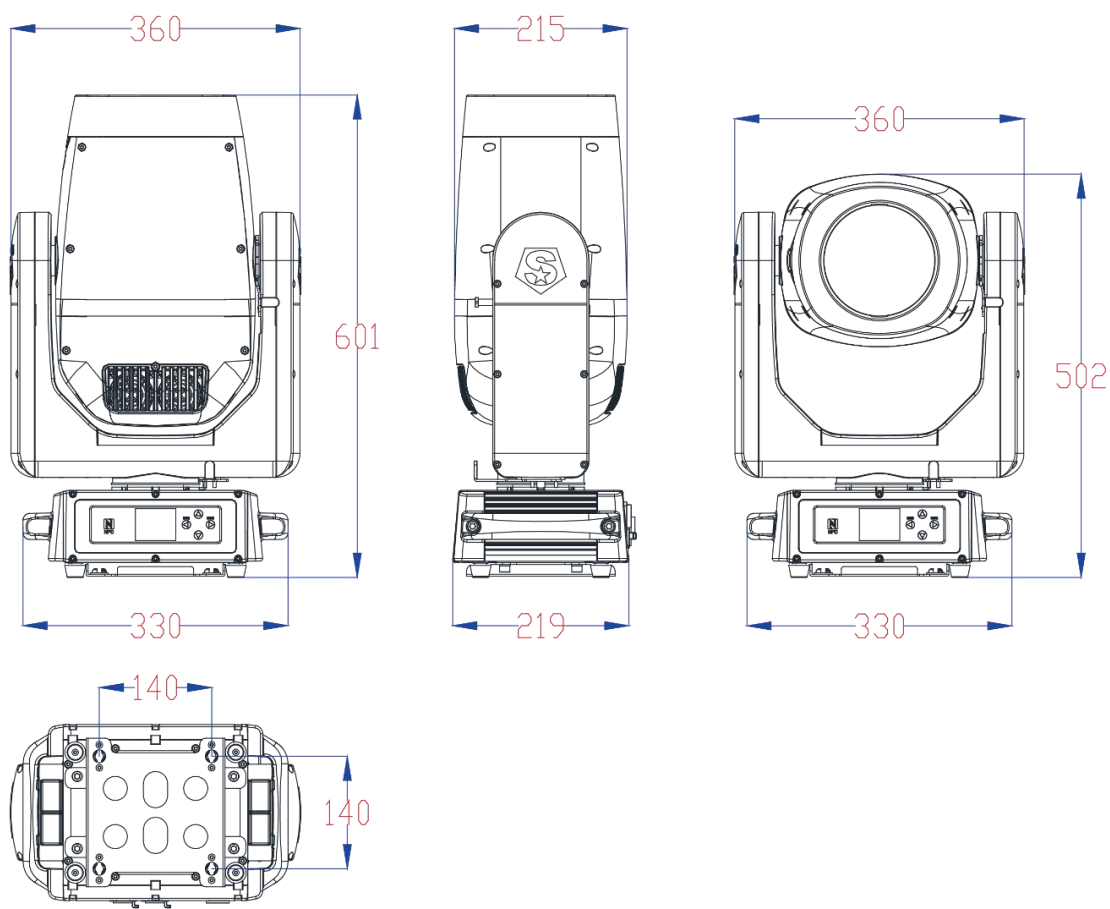

1.2 Safety Notes

IMPORTANT

- This product must be installed by a qualified professional.
- In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes
- The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

CAUTION!

- Make sure that the available voltage is not higher than stated on the rear panel.
- Do not touch the power cables if your hands are wet.
- The earth wire must always be connected to the ground. Therefore it is essential to connect the yellow/green conductor to earth.
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time. The electric connection, repairs and servicing must be carried out by a qualified employee.
- Always disconnect power input cable to completely remove power from unit when not in use or before cleaning or servicing the fixture.
- Do not switch the fixture on and off in short intervals as this would reduce the lamp's life.
- Do not touch the device's housing bare hands during its operation (housing becomes hot)! The surface of the product's casing can reach up to 70° C (158° F) during operation. Avoid contact by persons and materials. Do not install the product in a location where there is a risk of accidental contact. Allow the product to cool for at least 10 minutes before handling.
- For replacement use lamps and fuses of same type and rating only.
- Please protect the fixture and avoid destroy during transport and installation. If there is any damage to the coating, the shell may be corroded.
- When hanging lamps and lanterns, it is necessary to verify that facilities and hooks can bear at least 10 times the weight of lamps and lanterns.
- Fix the safety rope at the correct holes only. Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- The maximum ambient temperature 45°C must never be exceeded. Do not operate the product if the ambient temperature (Ta) exceeds 45° C (115° F).
- During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Electrical Warning

- The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person
- For replacement use lamps and fuses of same type and rating only.
- The lens has to be replaced when it is obviously damaged, so that its function is impaired, e. g. due to cracks or deep scratches!

Keep the product well away from flammable materials

- Keep all combustible materials (e.g. fabric, wood, paper) at least 500 mm (20 in.) away from the product.
- Ensure that there is free and unobstructed airflow around the product. Provide a minimum

clearance of 150 mm (6 in.) around fans and air vents.

- Do not illuminate surfaces within 3 m (10 ft.) of the product.
- Do not install a fuse that has a higher rating than the one originally installed in the product. Do not bypass fuses.
- Do not stick filters, masks or other materials onto optical components.
- If the fixture seems to be abnormally hot, shows signs of melting or emits smoke, disconnect the fixture from power immediately and allow it to cool. Do not touch the fixture without heatproof safety gloves. Keep the fixture well away from combustible and flammable materials.

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!
RETINA INJURY RISK - MAY INDUCE BLINDNESS!**

Do not point the front of the fixture towards the sun or other strong light sources. The front lens focuses and concentrates light just like a magnifying glass. Strong light can cause internal damage to the fixture, melting components or starting an internal fire within seconds.

To avoid problems from strong light sources:


- Do not expose the front of a fixture to sunlight or any other strong light source. Avoid pointing other high-powered beam lights directly at the fixture.
- Do not focus a light beam from one lighting fixture directly towards another.
- For outdoor applications during daylight, make sure that the front face of any fixture is shielded or points away from the sun, even when not in use.
- Do not expose the product to heat (from other lighting fixtures for example).

2 INSTALLATION

2.1 MOUNTING


Truss installation

- ◆ Keep all combustible materials (e.g. fabric, wood, paper) at least 500 mm (20 in.) away from the product.
- ◆ For overhead use, always install a safety cable that can hold at least 10 times the weight of the fixture.
- ◆ For overhead installation, the fixture must be always secured with a safety wire that can bear at least 10 times the weight of the fixture;
- ◆ Secure the fixture with a safety cable through the rear safety eye and truss as shown..
- ◆ Ensure that the structure (truss) to which you are attaching the fixture is secure

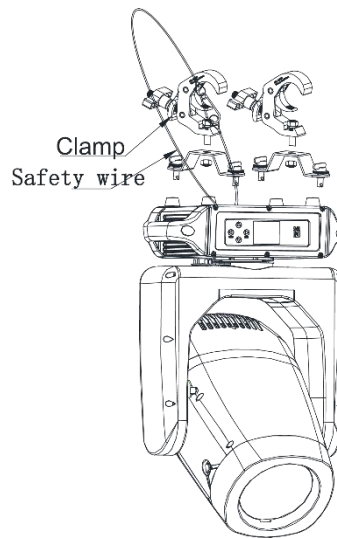

2.2 Fuse replacement

- ◆ Remove the safety cap by a screwdriver.
- ◆ Fetch the old fuse from safety cap.
- ◆ Install a new fuse.
- ◆ Install the safety cap.

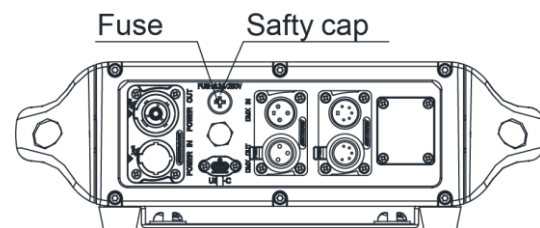

2.3 POWER CONNECTIONS

- ◆ POWER Linking: 3 units@110V; 6 units@220V.
- ◆ This product has an auto-ranging power supply that can work with an input voltage range of 100–240 VAC, 50/60 Hz.


AC Plug

Connection	Wire (U.S.)	Wire(Europe)	Screw Color
AC Live	Black	Brown	Yellow/Brass
AC Neutral	White	Blue	Silver
AC Ground	Green/Yellow	Green/Yellow	Green



2.4 Data network requirements

- ◆ Connect the DMX512 controller to the units in series. A DMX 512 data link is required in order to control the fixture via DMX. The fixture has 3/5-pin XLR connectors for DMX data input and output.
- ◆ Each unit has N DMX channels so the DMX Addresses should increase by increments of 1, (Nx1)+1, (Nx2)+1, (Nx3)+1...
- ◆ Any DMX address in the range from 001 to 512 may be used.
- ◆ Connect the DMX-output of the first fixture in the DMX chain with the DMX-input of the next fixture. Always connect one output with the input of the next fixture until all fixtures are connected.
- ◆ Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ω resistor between Signal (-) and Signal (+) into a 3/5-pin XLR-plug and plug it in the DMX-output of the last fixture.

DMX-output
XLR mounting-sockets

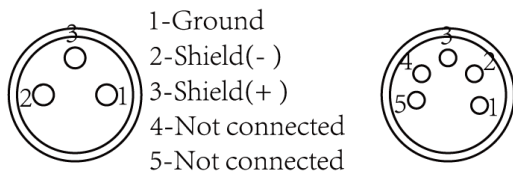


DMX-input
XLR mounting-plugs

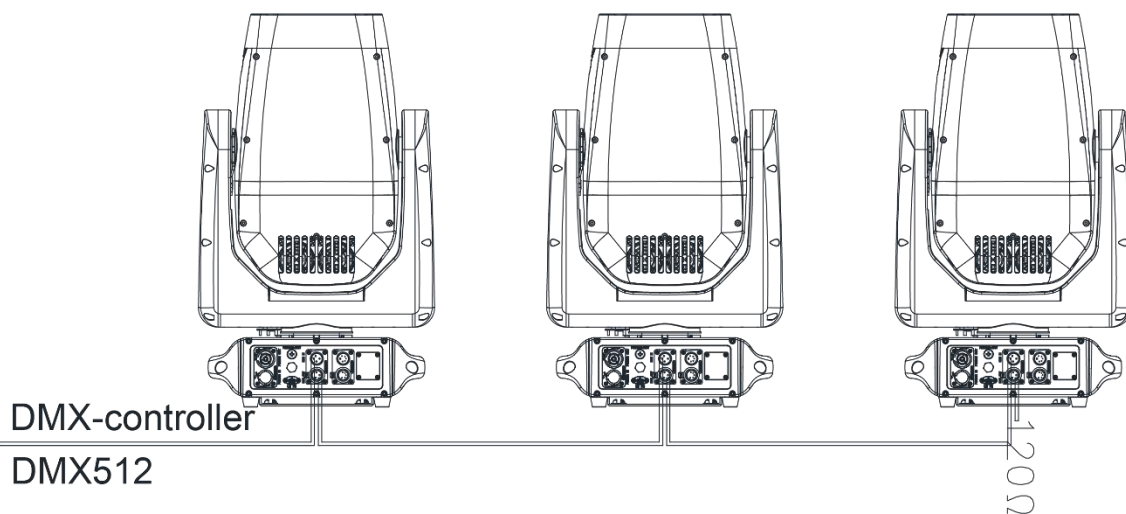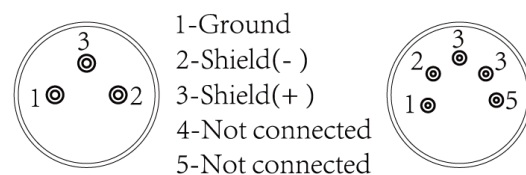

3 FUNCTIONS AND SETTINGS

3.1 DISPLAY OPERATION

- ◆ MENU: Used to access the menu or to return a previous menu option;
- ◆ ENTER: Used to select and store the current menu or confirm the current function value or option within a menu;
- ◆ UP: Navigates downwards through the menu list and increases the numeric value when in a function;
- ◆ DOWN: Navigates upwards through the menu list and decreases the numeric value when in a function;
- ◆ Lock screen password: Long press 5s Left, Input after the screen is bright - UP/DOWN/UP/DOWN

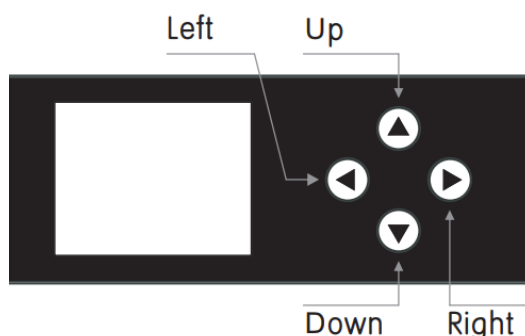

3.2 Menu Map

ADDRESS	001 – 512(Default 001)		DMX address setting
PERSON	BASIC		Use the menu to select desired channel mode
	STANDARD (Default)		
	EXTEND		
RUNMODE	DMX512 (Default)		Select Signal
	AUTO		Default: DMX512
	CUSTOM1		CUSTOM1-2 Set up get into EDIT MENU
	CUSTOM2		edit
OPTION	PAN INVERT	OFF (Default)	PAN moving direction selection
		ON	
	TILT INVERT	OFF (Default)	TILT moving direction selection
		ON	
	PAN DEGREE	630	PAN moving degree selection
		540	
	PERFORM	STUDIO	Fan mode low speed
		POWER	Fast rotation of fan, all power
		LIVE (Default)	Automatic rotation of fan
	BLACKOUT	OFF (Default)	Select OFF blackout without delay
		ON	Select ON Blackout delay 3s
	SUN PROTECTION	ON (Default)	Turn the fixtures Head to earth
		OFF	
	DIMMER MODE	Halogen (Default)	Dimming speed LED (fast) to Halogen (slow);
		LED	

EDIT	DIMMER CURVE	LINEAR			Sets the Dimmer curve
		SQUARE LAW (Default)			
		INV. SQUARE LAW			
		S-CURVE			
	LED PWM	1200Hz (Default)			Sets the PWM frequency
		2400Hz			
		4000Hz			
		6000Hz			
		25000Hz			
	NO DMX MODE	FREEZE (Default)			Hold after loss of DMX signal
		BLACKOUT			Blackout after loss of DMX signal
	DISPLAY TIME	On			Display backlight always on
		30s			Turns off display backlight after 30s/1min /2min of inactivity
		1min (Default)			
		2min			
	DISPLAY LOCK	OFF			Locks display (passcode is <UP>, <DOWN>,<UP>, <DOWN>, <ENTER>)
		ON (Default)			
	LOAD PARA	OFF			Upload data
		NO			Not upload data
	SETTING	RECOVERY	****		Restore default factory settings.
		CLEAN EDIT1	****		Clean customer self-editing scene 1
		CLEAN EDIT2	****		Clean customer self-editing scene 2
		WDMX HIDE	YES		Hide wireless mode WDMX reset and signal hide and the default is wired mode only
			NO		
	PT ENCODER	OFF			XY Encoder switch.
		ON			OFF is close; ON is open.
	LANGUAGE	****	Chinese		Language
			ENGLISH		
	WDMX RESET	YES			Clear the receiver's message
		NO			Do not clear the receiver's message
	SIGNAL	ONLY XLRDMX			ONLY XLR is wire only
		XLRDMX FIRST			XLR FIRST is wire first
		ONLY WDMX			ONLY WDMX is wireless only
		WDMX FIRST			WDMX FIRS is wireless first
		WDMX TO XLRDMX			WDMX TO DMX is wireless to wired
	EDIT 1-2	STEP 1-30	PAN	0-255	Edit the custom programs1-30
			TILT	0-255	Select play 【EDIT 1】 in RUNMOEDE CUSTOM 1; Select play 【EDIT 2】 in RUNMOEDE CUSTOM 2
			PT SPEED	0-255	
			CMY C	0-255	
			CMY M	0-255	
			CMY Y	0-255	
			COLOR	0-255	
			ROTA.GOBO	0-255	
			GOBO.ROTA	0-255	
			FIXED GOBO	0-255	

			PRISM 1	0-255		
			PRISM 2	0-255		
			F/M COLOR	0-255		
			ZOOM	0-255		
			FOCUS	0-255		
			DIMMER	0-255		
			STROBE	0-25		
			TIME	0-255		
			USE	YES/NO		Select YES to run the steps user need.
MANUAL	Auto Test				Auto Test channel	
	CHANNEL	PAN	0-255		Manual control channel	
		TILT	0-255			
		PT SPEED	0-255			
		CMY C	0-255			
		CMY M	0-255			
		CMY Y	0-255			
		COLOR	0-255			
		ROTA.GOBO	0-255			
		GOBO.ROTA	0-255			
		FIXED GOBO	0-255			
		PRISM 1	0-255			
		PRISM 2	0-255			
		F/M COLOR	0-255			
		ZOOM	0-255			
		FOCUS	0-255			
		DIMMER	0-255			
		STROBE	0-25			
	DEBUG HIDE	YES			Factory testing mode. All stepper motors are not controlled by signal, It only works again after the reset.	
		NO				
	RESET	ALL RESET			Select Yes/No to carry out all reset	
		XY RESET			Select Yes/No to carry out P/T reset	
		COLOR SYS			Color/CMYK reset	
		FOCUS\ZOOM RESET			Focus/Zoom reset	
		GOBO SYS			GOBO reset	
	INFO	FIXTURE HOURS				Hours of fixture use
		LED USE HOURS				LED use time
TEMPERATURE				LED temperature		
VERSION				Software versions		
RDM		UID	0x388Axxxxxxxx		Check fixture's ID	
		LABEL			Check fixture's LABEL	
SYSTEM ERROR		MEMORY IC			Memory IC	
		ANGLESENSOR			Angle Sensor	
		PAN SENSOR			Pan Sensor	
		PAN ENCODER			Pan Encoder	
		PAN DRIVEIC			Pan Drive IC	

		TILT SENSOR		Tilt Sensor		
		TILT ENCODER		Tilt Encoder		
		TILT DRIVEIC		Tilt Drive IC		
		TEMPERATURE		Temperature		
		CMY_C RESET		CMY C Reset		
		CMY_M RESET		CMY M Reset		
		CMY_Y RESET		CMY Y Reset		
		COLOR RESET		Color Reset		
		GOBO RESET		Gobo Reset		
		RGOBO RESET		Rotate Gobo Reset		
		FIXED GOBO		FIXED GOBO reset		
		PRISM 1 RESET		PRISM 1 Reset		
		PRISM 2 RESET		PRISM 2 Reset		
		F/M-COLOR RESET		Prism Reset		
		ZOOM RESET		ZOOM Reset		
		FOCUS RESET		FOCUS Reset		
		SERVICE	****	PAN	±127	Pan position fine adjustment
				TILT	±127	Tilt position fine adjustment
CMY-C	±127			CMY-C position fine adjustment		
CMY-M	±127			CMY-M position fine adjustment		
CMY-Y	±127			CMY-Y position fine adjustment		
COLOR	±127			CTO position fine adjustment		
ROTA. GOBO	±127			Rotate Gobo position fine adjustment		
GOBO.ROTA	±127			Self-rotation position fine adjustment		
FIXED GOBO	±127			Fixed Gobo position fine adjustment		
PRISM 1	±127			Prism 1 position fine adjustment		
PRISM 2	±127			Prism 2 position fine adjustment		
F/M-COLOR	±127			F/M-COLOR position fine adjustment		
ZOOM	±127			Zoom position fine adjustment		
FOCUS	±127			Focus position fine adjustment		
UPDATE SOFTWARE				Update software		
All passwords of this product are <UP>, <DOWN>,<UP>, <DOWN>, <ENTER>						

4 USING A DMX512 CONTROLLER

4.1 DMX CONTROL

BASIC (21CH)	STANDARD (25CH)	EXTEND (28CH)	VALUE	Functions
1	1	1	000-255	PAN
-	2	2	000-255	PAN FINE
2	3	3	000-255	TILT
-	4	4	000-255	TILT FINE
3	5	5	000-255	PT Speed
4	6	6	PAN Motor continuous rotation	
			0-63	stop rotation by spinout
			64-127	stop rotation by shortcut
			128-189	Forwards Pan rotation from fast to slow
			190-193	No rotation
			194-255	Backwards Pan rotation from slow to fast
5	7	7	000-255	CYAN
6	8	8	000-255	MAGENTA
7	9	9	000-255	YELLOW
8	10	10	COLOUR MACRO	
			000-010	No Function
			11-20	L106
			21-30	L194
			31-40	L019
			41-50	R08
			51-60	L213
			61-70	R80
			71-80	L202
			81-90	L328
			91-100	R3314
			101-110	L101
			111-120	L768
			121-128	No Function
			129-147	CYAN 100% / MAGENTA UP / YELLOW 0%
			148-166	CYAN DOWN / MAGENTA 100% / YELLOW 0%
			167-185	CYAN 0% / MAGENTA 100% / YELLOW UP
			186-204	CYAN 0% / MAGENTA DOWN / YELLOW 100%
			205-223	CYAN UP / MAGENTA 0% / YELLOW 100%
			224-242	CYAN 100% /MAGENTA 0%/YELLOW DOWN
			243-255	CYAN 100%/MAGENTA UP/YELLOW 0%
9	11	11	000-255	CMY SPEED(SPEED 100%->1)

10	12	12	COLOR WHEEL 8+1	
			000-007	WHITE
			008-014	COLOR 1
			015-021	COLOR 2
			022-028	COLOR 3
			029-035	COLOR 4
			036-042	COLOR 5
			043-049	COLOR 6
			050-056	COLOR 7
			057-063	COLOR 8
			064-191	COLOR WHELL1 0-360°
			192-222	COLOR WHELL1 RAINBOW EFFECT(SPEED 100%->1)
			223-224	STOP
			225-255	COLOR WHELL1 RAINBOW EFFECT(SPEED 1->100%)
-	-	13	000-255	COLOR WHEEL FINE
11	13	14	ROTATING GOBO 7+1	
			000-010	ROTATING WHITE
			011-018	ROTATING GOBO 1
			019-026	ROTATING GOBO 2
			027-034	ROTATING GOBO 3
			035-042	ROTATING GOBO 4
			043-050	ROTATING GOBO 5
			051-058	ROTATING GOBO 6
			059-066	ROTATING GOBO 7
			067-074	ROTATING GOBO 1 SHAKE (SPEED 1 —> 100%)
			075-082	ROTATING GOBO 2 SHAKE (SPEED 1 —> 100%)
			083-090	ROTATING GOBO 3 SHAKE (SPEED 1 —> 100%)
			091-098	ROTATING GOBO 4 SHAKE (SPEED 1 —> 100%)
			099-106	ROTATING GOBO 5 SHAKE (SPEED 1 —> 100%)
			107-114	ROTATING GOBO 6 SHAKE (SPEED 1 —> 100%)
			115-122	ROTATING GOBO 7 SHAKE (SPEED 1 —> 100%)
			123-127	WHITE
			128-190	STATIC GOBO POSITIVE WATER EFFECT (SPEED 100 —> 1%)
			191-192	STOP WATER EFFECT
			193-255	STATIC GOBO REVERSE WATER EFFECT (SPEED 1 —> 100%)
			191-192	STOP WATER EFFECT
			193-255	ROTATING GOBO FLOWING WATER EFFECT (SPEED 1 —> 100%)
12	14	15	GOBO ROTATING	

			000-120	ROTATING GOBO ANGLE ADJUSTMENT (0 → 360°)
			121-125	STOP
			126-165	ROTATING GOBO SHAKE (SPEED 1 → 100%)
			166-170	STOP
			171-210	ROTATING GOBO POSITIVE ROTATION (SPEED 100% → 1)
			211-215	STOP
			216-255	ROTATING GOBO REVERSE ROTATION (SPEED 1 → 100%)
-	15	16	000-255	GOBO ROTATING FINE
13	16	17	FIXED GOBO WHEEL 12+1	
			000-010	WHITE
			011-014	FIXED GOBO 1
			015-018	FIXED GOBO 2
			019-022	FIXED GOBO 3
			023-026	FIXED GOBO 4
			027-030	FIXED GOBO 5
			031-034	FIXED GOBO 6
			035-038	FIXED GOBO 7
			039-042	FIXED GOBO 8
			043-046	FIXED GOBO 9
			047-050	FIXED GOBO 10
			051-054	FIXED GOBO 11
			055-058	FIXED GOBO 12
			059-063	FIXED GOBO 1 SHAKE (SPEED 1 → 100%)
			064-068	FIXED GOBO 2 SHAKE (SPEED 1 → 100%)
			069-073	FIXED GOBO 3 SHAKE (SPEED 1 → 100%)
			074-078	FIXED GOBO 4 SHAKE (SPEED 1 → 100%)
			079-083	FIXED GOBO 5 SHAKE (SPEED 1 → 100%)
			084-088	FIXED GOBO 6 SHAKE (SPEED 1 → 100%)
			089-093	FIXED GOBO 7 SHAKE (SPEED 1 → 100%)
			094-098	FIXED GOBO 8 SHAKE (SPEED 1 → 100%)
			099-103	FIXED GOBO 9 SHAKE (SPEED 1 → 100%)
			104-108	FIXED GOBO 10 SHAKE (SPEED 1 → 100%)
			109-113	FIXED GOBO 11 SHAKE (SPEED 1 → 100%)
			114-118	FIXED GOBO 12 SHAKE (SPEED 1 → 100%)
			119-127	WHITE
			128-190	STATIC GOBO JUMPING WATER EFFECT (SPEED 100 → 1%)
			191-192	STOP WATER EFFECT
			193-255	STATIC GOBO FLOWING WATER EFFECT

				(SPEED 1 → 100%)
14	17	18	PRISM LINEAR 6	
			000-010	WHITE
			011-145	PRISM INSERT AND ADJUST THE ANGLE (0 → 360°)
			146-150	STOP
			151-200	PRISM INSERT AND POSITIVE ROTATION (SPEED 100% → 1)
			201-205	STOP ROTATION
			206-255	PRISM INSERT AND REVERSE ROTATION (SPEED 1 → 100%)
15	18	19	PRISM ROUND 8	
			000-010	WHITE
			011-145	PRISM INSERT AND ADJUST THE ANGLE (0 → 360°)
			146-150	STOP
			151-200	PRISM INSERT AND POSITIVE ROTATION (SPEED 100% → 1)
			201-205	STOP ROTATION
			206-255	PRISM INSERT AND REVERSE ROTATION (SPEED 1 → 100%)
16	19	20	FROST/MULTI-COLOR	
			000-063	OPEN
			064-127	FROST
			128-255	MULTI-COLOR
17	20	21	000-255	ZOOM
-	-	22	000-255	ZOOM FINE
18	21	23	000-255	FOCUS
-	-	23	000-255	FOCUS FINE
19	22	25	AUTO FOCUS	
			000-012	NO FUNCTION
			013-039	3 METER
			040-066	5 METER
			067-093	7 METER
			094-120	9 METER
			121-147	11 METER
			148-174	13 METER
			175-201	15 METER
			202-228	17 METER
			229-255	19 METER
20	23	26	000-255	DIMMER
-	24	27	000-255	DIMMER FINE
21	25	28	STROBE	

			000-009	NO FUNCTION
			010-099	STROBE (FROM SLOW TO FAST)
			100-109	NO FUNCTION
			110-179	LIGHTNING STROBE
			180-189	NO FUNCTION
			190-255	RANDOM STROBE
22	26	29	CONTROL CHANNEL	
			0-10	NO FUNCTION
			11-15	PAN/TILT BLACK ACTIVATED
			16-20	PAN/TILT BLACK DEACTIVATED
			21-25	PAN INVERT
			26-30	TILT INVERT
			31-35	PAN/TILT INVERT OFF
			36-40	PAN DEGREE 630
			41-45	PAN DEGREE 540
			46-50	Sun Protection On
			51-55	Sun Protection Off
			56-100	RESERVED
			101-105	STUDIO
			106-110	POWER
			111-115	LIVE
			116-130	RESERVED
			131-135	DIMMER SPEED Halogen
			136-140	DIMMER SPEED LED
			141-145	DIMMER CURVE LINEAR
			146-150	DIMMER CURVE SQUARE LAW
			151-155	DIMMER CURVE INV. SQUARE LAW
			156-160	DIMMER CURVE S-CURVE
			161-165	1200Hz
			166-170	2400Hz
			171-175	4000Hz
			176-180	6000Hz
			181-185	25000Hz
			186-200	RESERVED
			201-205	ALL RESET
			206-210	XY RESET
			211-215	COLOR\GOBO SYSTEM
			216-220	FOCUS\ZOOM RESET
			221-255	NO FUNCTION